 


HAUSBERG®

HB-2029

2 IN 1 VACUUM CLEANER

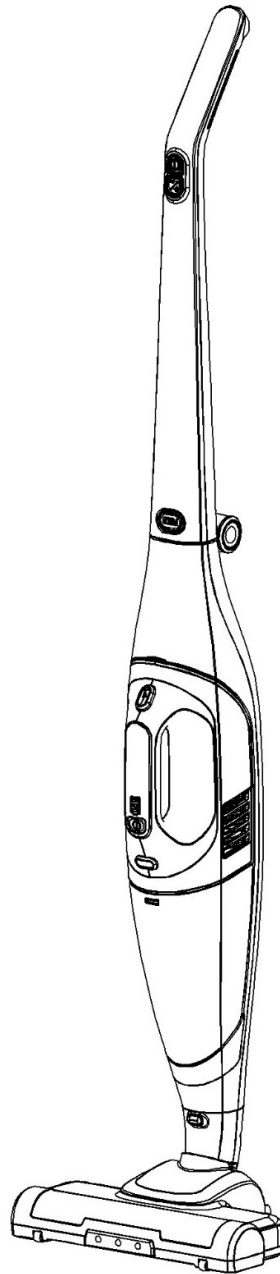

IMPORTANT SAFEGUARDS

- Read all instructions carefully before using your appliance and retain for future reference.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not use accessories other than those supplied with the appliance
- Do not leave parts of packaging (plastic bags, foam polystyrene, nails, etc.) within reach of children or incapable persons as they are potential sources of danger.
- Switch off and unplug the appliance when not in use, before changing accessories or cleaning.
- Don't leave the appliance on if it is unattended.
- Don't use a damage cord, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Never use unauthorized attachment, it may cause fire, electrical shock or injury.
- Don't let the power unit, cord or plug get wet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Before using the appliance for the first time, ensure all packing is removed and disposed of correctly and kept out of reach of children.
- Always place the appliance on a solid, flat and dry surface.
- Ensure that your hands are dry when operating switches or removing plugs.
- The Rechargeable Vacuum Cleaner is intended for home use only and is unsuitable for industrial or commercial purposes.
- Discontinue use if the appliance is defective or malfunctions in any way.
- Do not operate the appliance if the power cord is damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard.
- To unplug, grip the plug and remove it directly from the wall socket. Never disconnect by pulling on the appliance's cord.
- Avoid the use of an extension cord, as this may overheat and cause a risk of fire.
- Keep the power cord away from heated surfaces.
- Remove the plug from the main power supply when cleaning or while in use.
- The appliance is intended for household use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that for which it is intended.
- If you open the housing and dispose the batteries, the appliance will be irreparably damaged!
 - 1) Before you start removing the battery, discharge it completely.
 - 2) Remove the dirt collector.
 - 3) Undo the screws on therear of the hand element and pull the two halves of the housing apart.
 - 4) Remove the motor from the housing half.
 - 5) Undo the screws on the plastic bracket that holds the blue battery and remove the plastic bracket.
 - 6) Use pliers to cut the cable that leads to the blue battery. Make sure that you do not short circuit the bare cable ends with the metal parts of the pliers.
 - 7) Remove the battery and dispose of it in an environmentally friendly manner.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery
- The battery is to be disposed of safely.
- **WARNING:** For the purposes of the recharging the battery, only use the detachable supply unit provided with this appliance.



- used only with ZD12D240035EU or ZD012A240050EU or JVS2180350 or JVS2400350 or JBS2180350 or CZH013218035EUWH or CZH013218035BSHW supply unit.

IMPORTANT For Household Use Only

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY DO NOT USE OUTDOORS OR ON WET SURFACES.

1 DO NOT use, charge or store the hand vacuum outdoors or on wet surfaces. Store the vacuum indoors. Put vacuum away after use to prevent accidents.

2 Use only as described in this manual.

3 DO NOT allow to be used as a toy. Close attention is necessary when used by or near children. **DO NOT** leave vacuum unattended while in use.

4 DO NOT handle plug, charger or appliance with wet hands.

5 Fully assemble vacuum before operating. **DO NOT** use vacuum cleaner without dust cup filter in place. Use only on dry, indoor surfaces.

6 DO NOT use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard electrical outlet.

7 DO NOT attempt to use the charger with any other product nor attempt to charge this product with another charger.

8 DO NOT use charger with damaged cord or plug. If charger or hand vacuum has been dropped, damaged, left outdoors, or dropped in water, return it to repairing centre for examination, repair or adjustment.

9 DO NOT abuse the charger cord, pull cord around sharp edges or corners or close door on cord. **Never** carry the charger by the cord or yank to disconnect from an outlet; instead grasp the plug and pull to disconnect. Keep charger cord away from heated surfaces.

10 Use only manufacturer's recommended attachments. Always turn off this appliance before connecting or disconnecting the motorized nozzle. **DO NOT** attempt to change accessories while unit is running.

11 Use extra care when cleaning on stairs.

12 Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

13 DO NOT put any objects into openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.

14 DO NOT use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present. **DO NOT** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

15 This product includes rechargeable lithium batteries. Batteries must be recycled or disposed of properly and safely. The battery must be removed from the appliance before it is discarded. The appliance must be disconnected from the supply when removing the battery. **Do not incinerate batteries or expose to high temperatures, as they may explode.**

16 DO NOT charge the battery at temperature below 32°F (0°C). This will degrade the battery performance, shorten life and cause gas leakage from venting. Optimum charging efficiency for the battery is within temperature range of 50°F (10°C) and 86°F (30°C).

17 DO NOT charge with the battery polarity reversed. This will cause battery venting, swelling or rupture.

18 Leaks from battery cells can occur under extreme conditions. Improper use of the battery can cause the safety vent to activate. Small amounts of liquid (alkaline electrolyte) will leak from the vent near the terminal. If the liquid gets on the skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.

19 DO NOT use for any purpose other than described in this user's guide. Look on your hand vacuum and follow all label and marking instructions.

20 This vacuum is intended for household use only.

21 DO NOT charge the unit outdoors.

CAUTION:

DANGER

- This product has a built-in special rechargeable battery. Please do not use for other products. Please use a dedicated power adapter to recharge.
- Do not put it into the fire or heat.
- Do not use nail to drill, knock or without permission for disassemble, renovation, repair, etc.
- Do not use metal contact plug terminal which may cause a short circuit dangerous.
- Do not charge, use and place the vacuum cleaner near the fire or the high temperature environment .

WARNING:

- Do not inhale fire or fuel (such as cigarette butts, gasoline, thinner, print cartridge).
- Except the parts which can be washed, the other parts of the vacuum cleaner cannot be washed.
The parts after washed require can't be re-assemble into the body till the water completely dry, otherwise it will cause damage of the internal circuit board or and the battery pack.
- Do not use in the bathroom, damp environment and etc.
- Do not use the power cord or plug damage.
- When maintaining the product, please unplug the power adapter.
- If not use the vacuum cleaner for a long time, please unplug the power adapter.
- When unplug the power adapter, please pay attention and do not pull the power cord, but should pull the adapter ontology.
- The power adapters are intended for household use only or please not watch in the rain.
- If battery leakages accidentally into eyes, please clean with clean water immediately and see the doctor as soon as possible.

- If any abnormality occurs during the use of the product, please shut down and unplug the power plug immediately. And sent to the nearest service center. Do not disassemble yourself.

Product usage precautions:

- Before using this product, please read carefully the instructions, so as to avoid improper operation.
- Before plug the power supply, should firstly make sure the power supply voltage be consistent with the rating label voltage.
- The product is only suitable for adults use, Do not allow children to use unless there is an adult guardian.
- This product is only applicable to family environment use, please do not used for other purposes
- When storing for long time, make sure the storage environment is clean and dry
- The suction nozzle is a hard material, be careful not to scratch the wooden floor.
- - Do not turn on the power when the dust box is removed. Otherwise, larger particles may be inhaled and the product may be damaged.
- Do not block the outlet or inlet, otherwise it will cause overheating and the suction will drop.
- When the dust container is full of garbage, it should be cleaned up in time, otherwise it will cause overheating and suction loss.


Product specifications:

Rated power	150W
Rechargeable batteries	18.5V (5batteries) 2000mAh
dust container capacity	460mL


Assembly:

The product your get is with decomposition packed, it need simple assembles before use.


- Open the packing, take out the parts

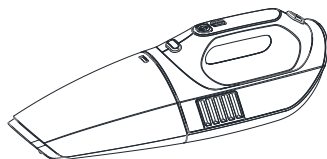


Main Body

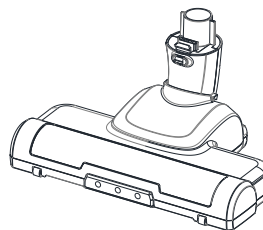

Motorized Brush

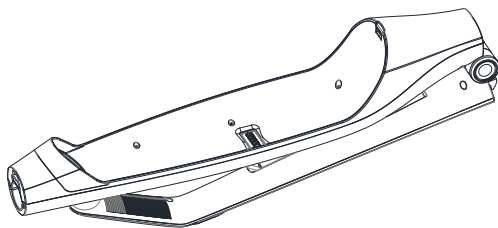


Body support

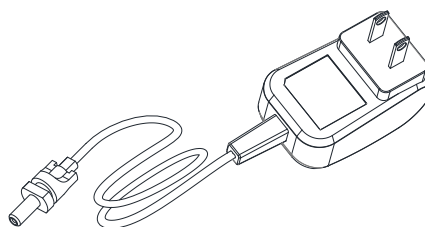


Charger


- - Expand the body support, turn the handle in the opening direction, and lock to the click clasp, as shown below.

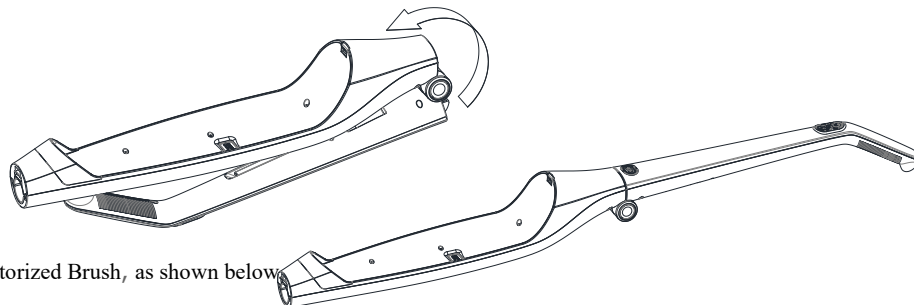



- - Assemble the motorized Brush, as shown below.

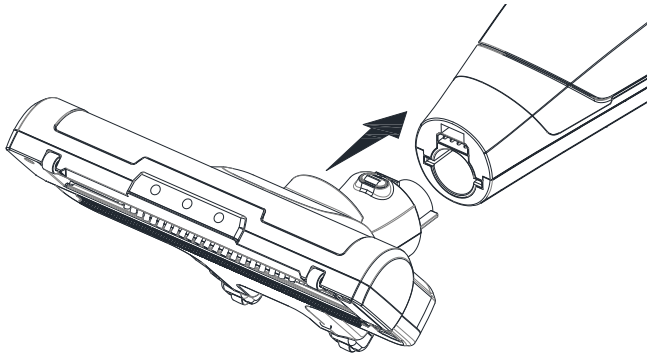

- Assemble the main body, as shown below

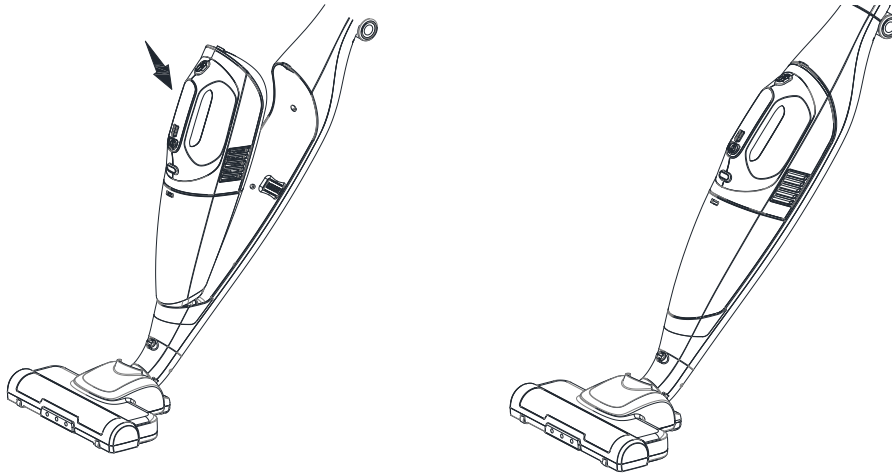


Product Details:

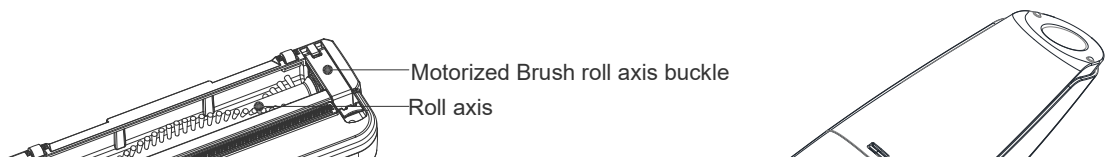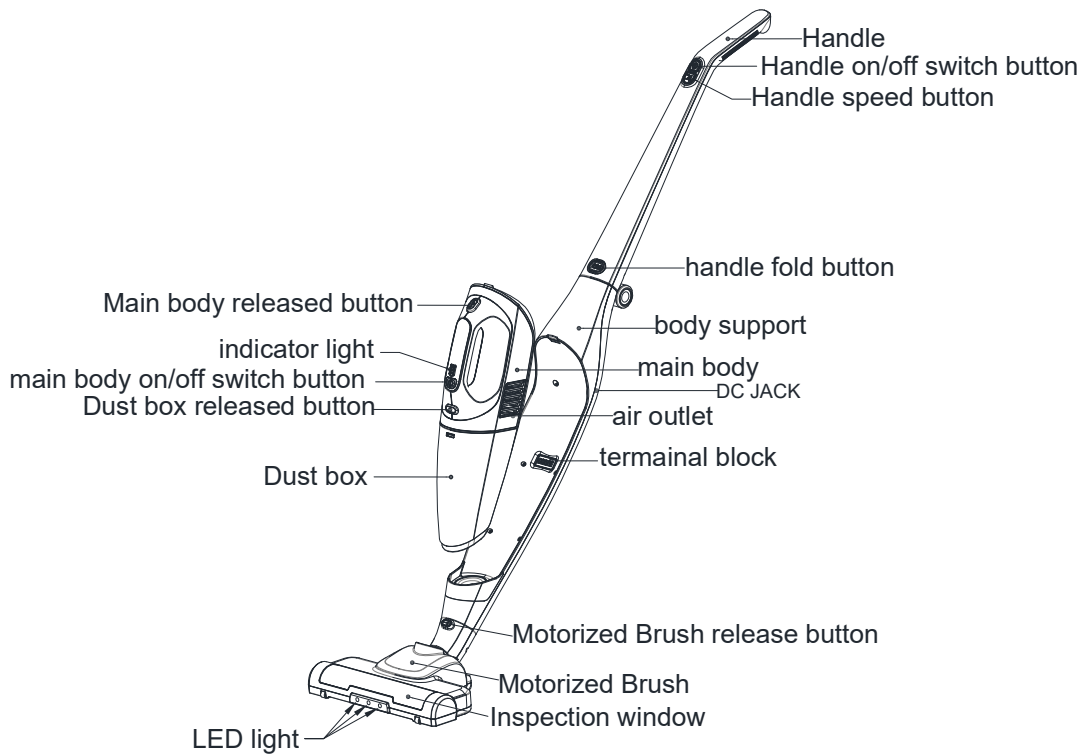


CHARGE:

- When the product is delivered from the factory, the battery is not full of electricity, so make sure to full charge the battery before using it (it takes about 8 hours to fully charge).
- When not in use for more than a month, please fully charge it with electricity, unplug the power adapter and preserve it fully charged at least three months once.
- When automatically stop in use because of the power consumption, please do not try to start again or ignore it, make sure to place it back to charge immediately, otherwise the battery discharge would cause a battery life decline.
- Please make sure to put it to charge after used.
- Make sure to charge under 5 °C ~ 35 °C environment. Charging under too low or too high temperature will cause the charging time longer and the discharging time shorter.
- It is normal that the temperature of the body and adapter rises when charging.

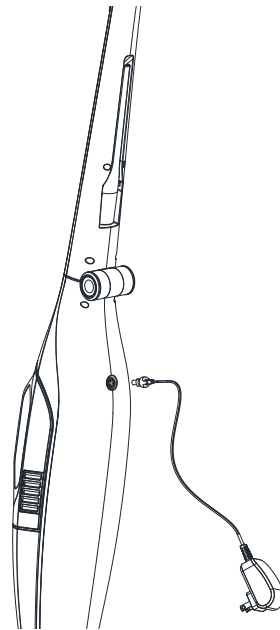



 
- After electrified, the indicator light on the handle will emit the light indication automatically according to the power in the system, and the indicator light has four states as below:
 - a. The first light sparkling, the electricity is low.
 - b. The first light on while the second light twinkling, the electricity is more than half.
 - c. The first and second light on while the third light shining, nearly full recharged.
 - d. All three lights on, the electricity is full.

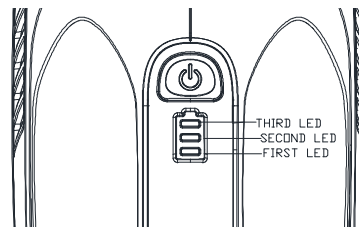


USAGE:


- If the product in the upright position, please pull the handle backward, so that the body support can leave from the buckle and then it can start to work.

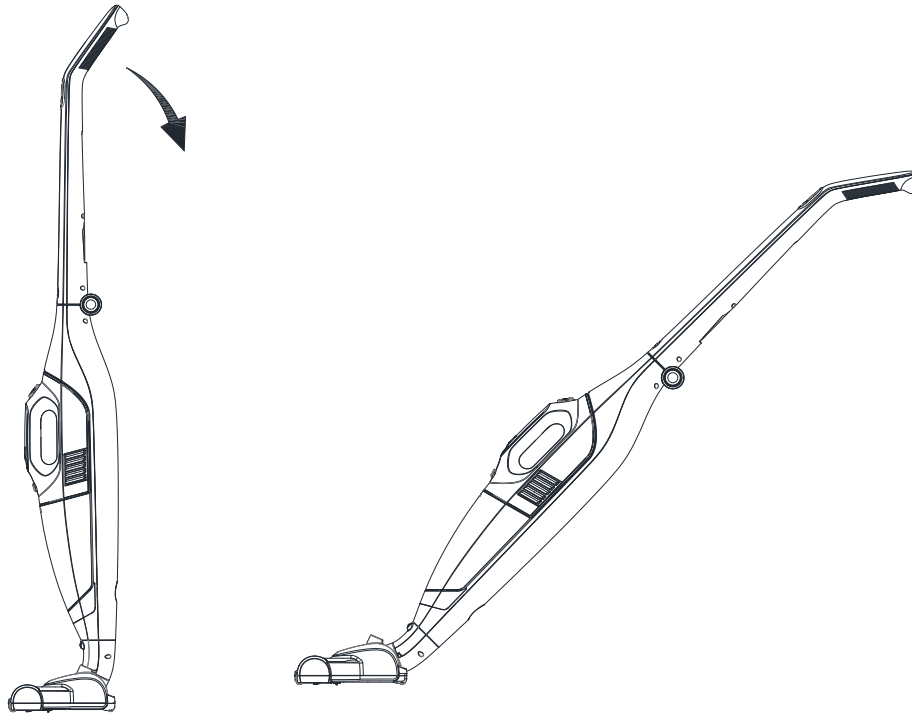


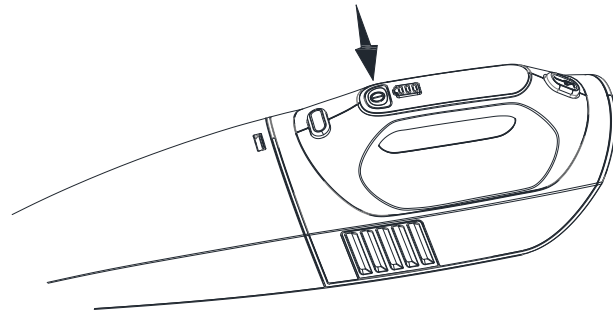
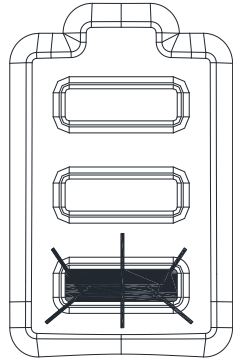
Press the power button “  ” ON, then press again, it will become OFF. When it is ON, press  to switch to LOW speed, then press again, it will change to HIGH speed. Each cycle like this way.

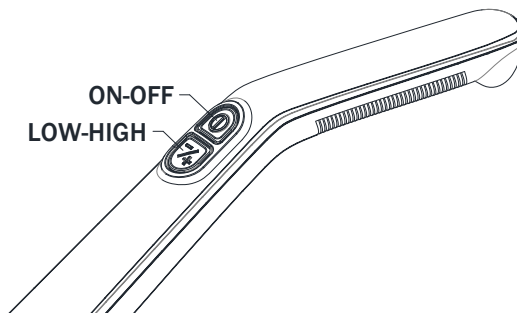



- In the status of power on, the brush and LED lighting will work together. Accordingly to the switching of LOW-HIGH, the brush will rotate at a high speed and low speed, also, the LED lighting will change between high and low light level.
- Push the handle back and forth to move the brush back and forth, twist the handle to turn the brush left or right to reach every corner of the ground where you need to clean it.
- Press the release button to remove the main body (as below picture), you can use it for cleaning elsewhere, such as countertops, sofas, seats and other surface cleaning.

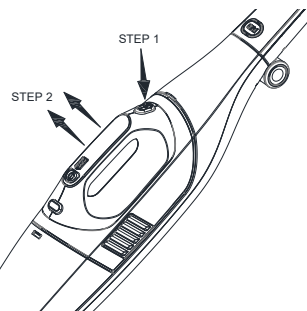

- Press power button  ON, the main body will star to be HIGH speed; And then press again, it will switch to LOW speed; Finally, if press more again, it will change to power off.



- If there is narrow corner, you can use flat suction nozzle accessory for cleaning. The flat suction nozzle putted in the back of the handle (See below picture), take it out and then insert the air inlet of the main body.

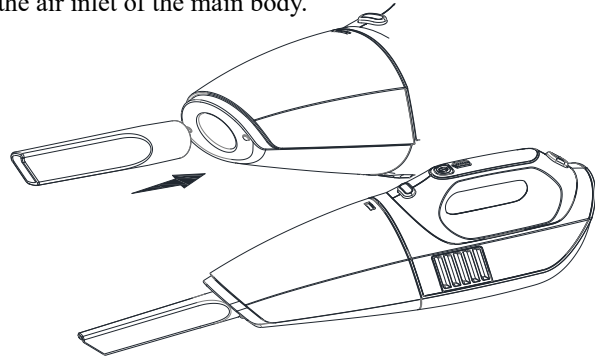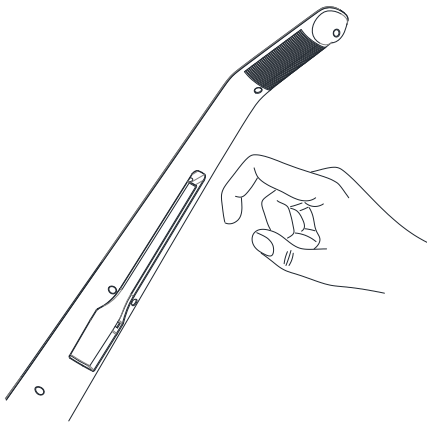

- No matter in high or low speed in use, if the battery is full, the three lights are on (See Figure a) ; If the battery power is in the middle, the third light is off (See Figure b); If the power is low, the second light goes out(See Figure c).

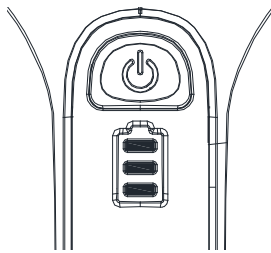


Figure a

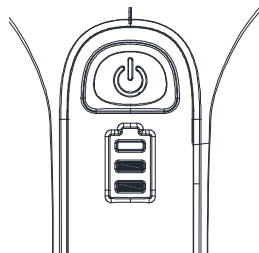


Figure b


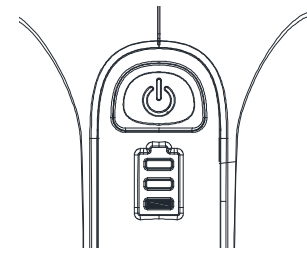


Figure c


- When the battery level is extremely low, the first light starts flashing. At this time, the machine should be turned off and then charged. If continue to use, the system will forcibly shut off when the battery reaches the cut-off voltage. This is a protection action to prevent the battery from being over discharged. It is not a malfunction of the machine, just put it back to the charging. However, we recommend that you turn off the unit and turn it off immediately when the indicator light flashes, which will help extend battery life.

Maintenance:


- Please turn off the power when cleaning the dirt container or maintenance machine.
- When the dust container is full of rubbish or feels weak, you need to clean the rubbish. Take the main unit out, press the "dust tank release button", and then remove the dust box.

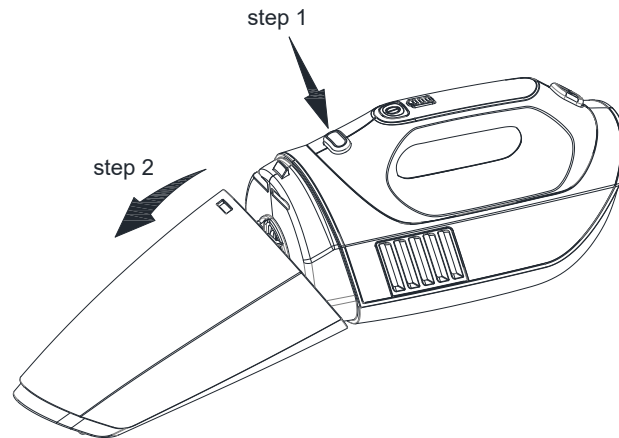


- Pull out the dust filter holder and dump the rubbish from the dust container to the dustbin.

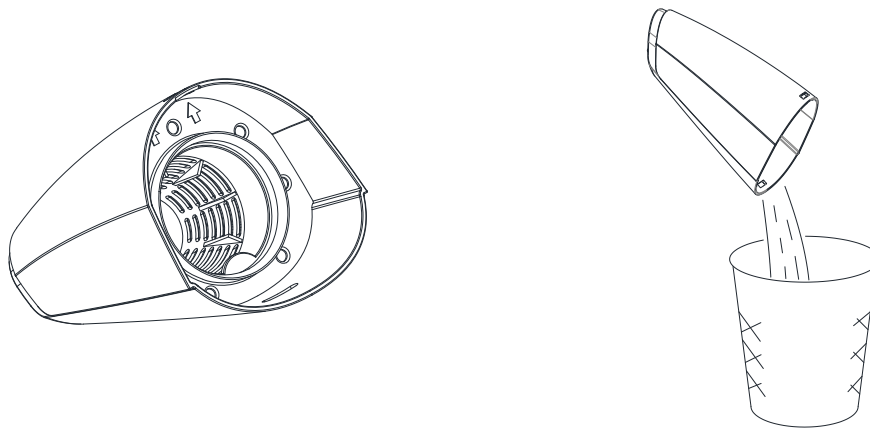



Rinse the dirt container's inside & filter with water, remove the dust filter to flush. Wipe or dry the water after rinsing, dry all parts thoroughly before putting it into assembled.

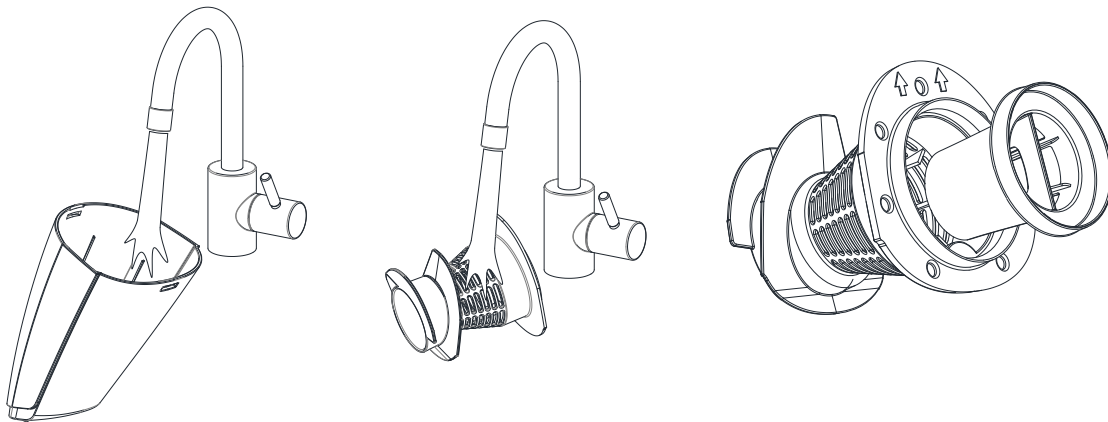

- When brush roller is in process use, it will winding the hair & fiber , the great amount of wrapped fibre will clog the air outlet and causing the suction power decreased.and need to cleaned regularly. Flip the Scroll brush to make up the base, pick out "brush roller plate", and open to the maximum angle, remove the brush roller and cleaning the winding. Place it back in the original position and press down to the "click" button.

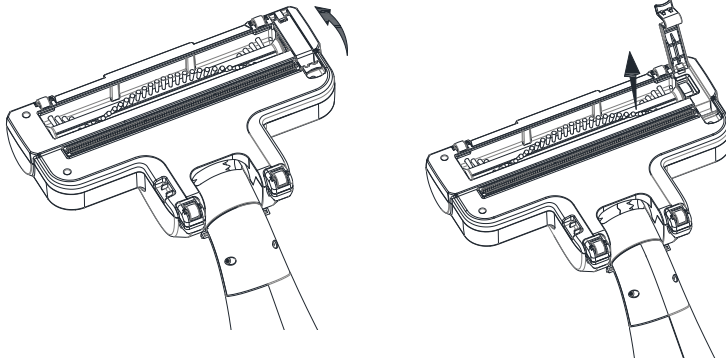

- Except for the parts that can be washed, the other parts can be cleaned with wet cloth.
- The metal contact with terminal is easy to produce oxide layer (or very thin dust layer) on the surface, Also reduce the contact performance, at this time, the sharp objects like toothpicks can be gently scraped On the metal surface, and then wiped with dry cloth, don't squeeze it too hard, otherwise it is easily to cause metal terminal deformation.
- When the product is not in use for a long time, it can be foldout , press the “ handle folding button” and Swing the handle backward to let it fall naturally.

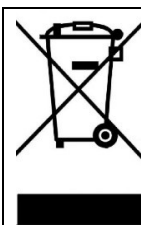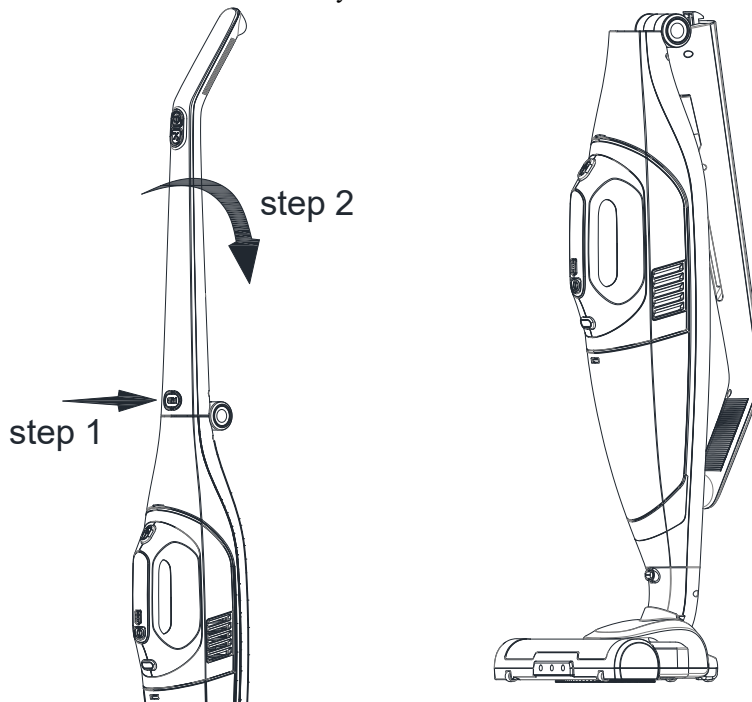

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.