

Vacuum Cleaner Instruction Manual



Canister Vacuum Cleaner

*** General Safety Instructions**

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose.

This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.

- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- Do not operate the machine without supervision. If you should leave the workplace, always switch the machine off or remove the plug from the socket (pull the plug itself, not the lead).
- To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions“.

*** Special Safety Instructions**

- Do not suck up liquids!
- Do not suck up hot ashes or pointed or sharp objects!
- Do not use the appliance in humid rooms!
- Never use without the filter. Check that the filter is inserted correctly!
- hair, clothing and body parts away from the vacuum nozzle during use!
- Keep the vacuum cleaner away from sources of heat like radiators, ovens, etc.!

***Start-up**

- Insert the connection head of the suction hose into the hose connector (10) until it locks in place. To do so, please press the buttons simultaneously. In order to release the hose again, please press the buttons once more on the connection head.
- Keep the buttons pressed down and then pull out the hose.
- Please attach the telescopic suction tube to the grip end (see section " Suction Tube").
- Then assemble the floor nozzle and/or the accessories.

*** Using the Appliance**

1. Unwind the length of cable you require.
2. Insert the mains plug into a correct socket. Turn on the device with the on/off switch (1) by pushing it downwards.
3. Adjust the suction power by turning the suction power regulator (6).
4. Vacuum at a steady speed. There is no need to exert pressure.
5. Attention: pay attention to the range that can be covered with the cable length.

*** Vacuum power regulator**


Low vacuum power: For curtains and delicate fabrics

Medium vacuum power: For long-pile carpets and textile flooring


High vacuum power: For sturdy rugs and floors

*** Telescopic Suction Tube:**

1. This makes it possible to adapt the height to your individual body size. Unlock the coupling by turning the wide section of the suction tube to the left.
2. Move the suction tube as required. To lock the coupling, turn the wide suction tube to the right.

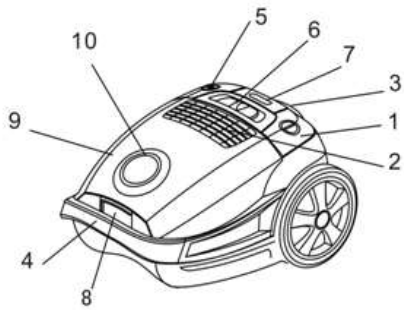

* 8009A

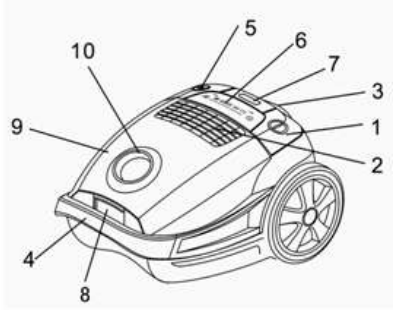

8009B

Overview the components

- 1 On/off switch
- 2 Filter cover - Outlet filter
- 3 Hook for floor brush
- 4 Carrying handle
- 5 Cable-winding key
- 6 Vacuum power regulator
- 7 Dust bag filling display
- 8 Handle for opening the dust
- 9 Dust bag compartment (front cover)
- 10 Hose connection

Accessories (not shown): "2-in-1" nozzle (groove and brush nozzle)

*** Cable winding device:**

Pull out the cable up to the maximum length indicated with the yellow mark.

Never pull the cable out up to the red mark as the cable winding can be damaged.

Said damages are not covered by the warranty.

Winding

Press the cable (5) winding button and guide the cable. Hold the cable to avoid wrapping.

Nozzle Attachment:

Crevice nozzle/

Brush nozzle: For vacuuming upholstery, curtains and in corners and crevices etc.

"2-in-1" nozzle: When this is folded together it can be used as a groove nozzle. If you would like to use the brush nozzle, pull the brush section in the direction of the arrow until it locks in place.

Floor nozzle: To clean carpets or smooth surfaces.

Smooth floors: Press down the lever with the brush symbol with your foot. The brush is now visible.

Carpets: Press down the opposite lever.

Releasing the nozzles: Pull these off while turning slightly.

*** Air Slide:**

Open the air slide on the hose handle in order to regulate the airflow or to clear any articles sticking to the nozzle.

*** Dust bag replacement display (7):**

Hold the hose up into air. If the dust bag change display lights up, the bag is full. Please change it.

*** Changing the dust bag:**

- Pull the plug out of the socket.
- Open the lid of the dust bag compartment by the handle (8) (until it locks in place).
- Remove the bag by pulling the fixing device carefully towards the rear in order to make the bag more easily accessible. Then remove the dust bag by pulling it upwards.
- Insert a new bag. Please ensure that the bag is located correctly in the guide

*** Filter:**

Your appliance has two filters.

Motor protection filter (inlet filter):

The inlet filter is located in the dust bag compartment. The filter is located vertically in the rear section of the dust housing. Remove the filter by pulling upwards. Clean the engine protection filter after dust bag changes. If necessary, the filter can also be washed in warm water without any additives. Place it back into place only once it is completely dry!

Outlet filter:

The appliance is also equipped with an outlet filter. This filter is to be

found on the side of your device behind the ventilation grille.
Open the ventilation grille by turning the filter cover
Then pull the grille out towards the front. Remove the filter and clean as described above. Please reinsert the filter correctly and then close the ventilation grille.

***Cleaning and storage**

Cleaning

- Pull the plug out of the socket before cleaning!
- Clean the casing with a dry cloth.

Storage

- Let the iron cool down completely.
- Wind the cable completely.
- Position the device either horizontally or vertically in order to suspend the hook on the floor nozzle in the parking assistance on the rear or the bottom of the device.

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations. Subject to technical changes without prior notice!

-the appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

-children being supervised not to play with the appliance.